



# Sound Switcher Update Guide

## for 2026 Sound Switcher

### IMPORTANT NOTICE

(1) REMOVE 2025 USB inside the Sound Switcher.

(2) INSERT 2026 USB directly into TV USB port.

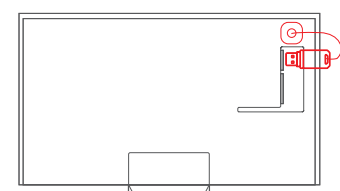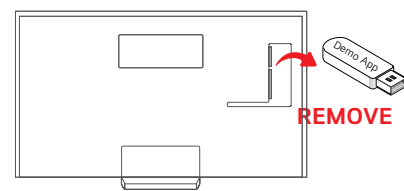

## What's new in 2026

### Demo App USB

- Designated Demo App USB for OLED and MRGB/QNED TVs.  
\* One integrated USB for both OLED and MRGB/QNED TVs may be provided depending on the region.
- Connect 2025 Demo App USB to TV USB port1, and Sound Switcher to USB port2.
- Sound Switcher demo contents are updated.

### Demo Contents Update

2026 : Total 3 contents for 2026

- USP : Brand New (WOW Orchestra introduction Video)  
• Playback mode : WOW Orchestra only / TV audio output switching : Not supported
- Cosmos : The same as 2025
- Africa Unseen : Brand New


### New Function Update

- The background video automatically plays according to the selected thumbnail.

### 2026 Sound Switcher Support Models

TV	2025		2026	
	OLED	G/C Series	OLED	G/C Series
MRGB	-	-	MRGB95B / MRGB9MB	
QNED	QNED92 / QNED90 / QNED85		QNED90B / QNED85B	
Soundbar	S70T series or above models			


## Button Function & Operation

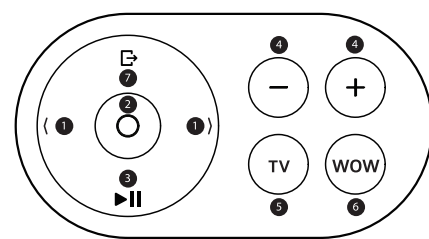

- Browse Content (Left/Right)**  
- Browse and select content by moving focus left and right
- Select Content**  
- Play the focused content
- Play/Pause**  
- Control the playing content using this button
- Volume control (- / + 5 Level)**  
- Press to adjust volumes (set to volume 20 by default)
- Select Audio Output : TV**  
- Move to TV sound experience mode
- Select Audio Output : WOW Orchestra**  
- Move to WOW Orchestra sound experience mode
- Exit Demo Mode (Switch to idle mode - TV Demo Content)**  
- Exit to TV Demo video screen (idle mode)

- Once the TV is powered on, the switcher will run automatically.
  - If there is no user input, the sound switcher plays Store video contents. (Volume "0")
  - When any Sound Switcher button is selected, it turns on demo mode.
  - The 1st video among switcher-demo content is played.
  - Controlling the buttons, choose and play the contents. (default volume : 20)
  - If there is no user input for 60 seconds, Sound Switcher automatically returns to IDLE mode.
- It may take 20 seconds for the switcher to load and stabilize during the initial power connection.
  - When the Demo App is terminated with external operation, it will be automatically re-started after 2 minutes.

## Package Components

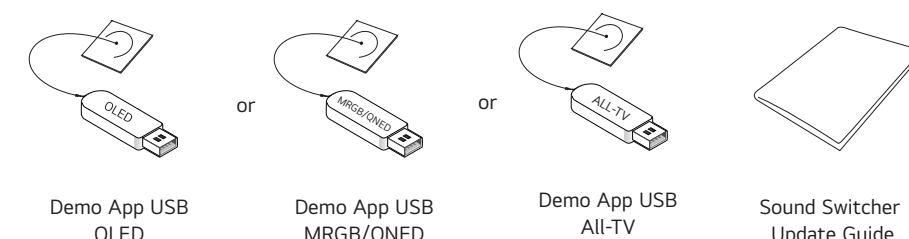

### \* Demo App USB

- The Demo App USB includes either OLED or MRGB/QNED.
- One integrated USB for both OLED and MRGB/QNED TVs may be provided depending on the region which will be marked as "ALL-TV".

\* If you have any additional inquiries or need technical support, contact Rydis/HSAD, and please make sure to include both of them.


**RYDIS**  
TEL : 82-70-8671-2210  
E-MAIL : rydis-cs@rydis.co.kr  
HOME : www.rydis.co.kr

**HSAD**  
TEL : 82-10-7123-2874  
E-MAIL : kyh2013@hsad.co.kr  
NAME : Yun Ho Kang

## Installation Guide - Step 1

### Remove 2025 Sound Switcher USB Memory

- Remove the existing USB.

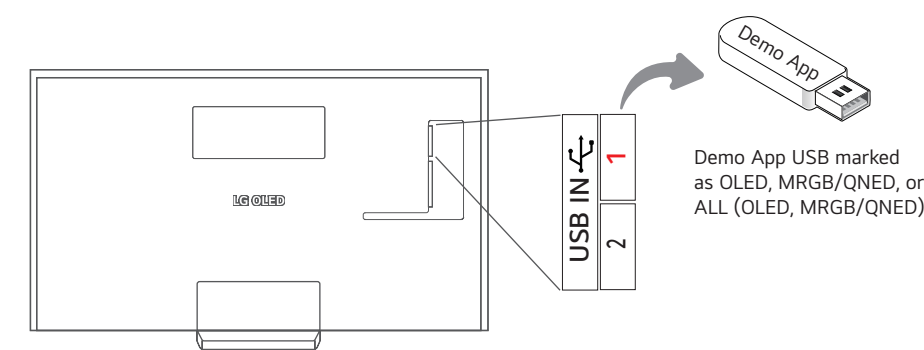


Demo App USB marked as OLED, MRGB/QNED, or ALL (OLED, MRGB/QNED)

## Installation Guide - Step 2

### Install 2026 Sound Switcher and Demo App USB

- Connect the 2026 New Demo app USB to TV USB port 1.
- Check TV model (OLED or MRGB/QNED) and connect the appropriate USB that matches.  
\* If the USB is marked as ALL (OLED, MRGB/QNED), there is no need to check the TV model separately.
- Connect the Sound Switcher USB cable to TV USB port 2.

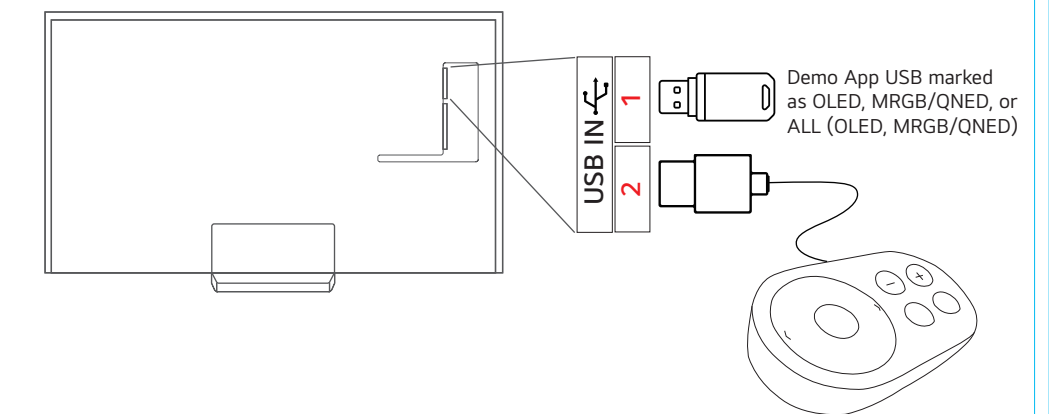


## Installation Guide - Step 3

### Attach USB Secure Lock

- Remove the film from the back of the pad.



- Attach the pad to the empty space on the back of the TV.

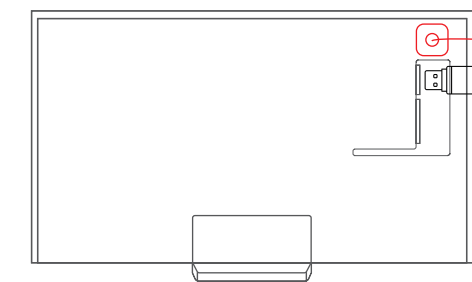

### \* For 2023Y version Sound Switcher


Please check to the guide below and update the firmware first.  
<https://https://lg-instore-support.com/soundswitcher>

## Installation Guide - Step 4


### Additional Setup : POP & Button Stickers (Optional)

- Remove the sticker film from the back of the POP piece.
- Attach on the fixture or wall aside the Sound Switcher device.
- Attach new red button stickers on 'TV' and 'Wow Orchestra' button on Sound Switcher device.
- Download the POP source files from the "DAM".

#### [Stand Type]

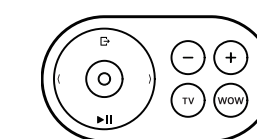


top view

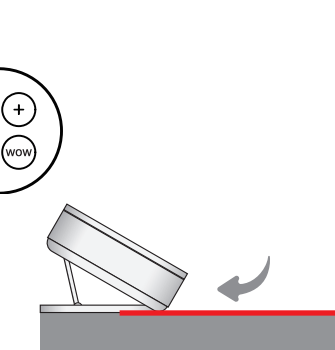


side view

#### [Wall Type]

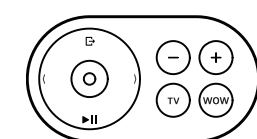

front view

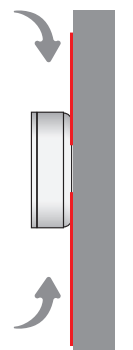

side view